




E-Z UP® INSTANT SHELTERS®


HOW TO SET UP YOUR E-Z UP® INSTANT SHELTER® FOOD BOOTH SIDEWALLS

FOOD BOOTH WALL SET UP:


1 Set Up your E-Z UP® Instant Shelter®. Before starting to hang the Food Booth Walls, Fold the top Fabric back halfway at each corner. The walls will zip and wrap around each corner, fitting under the top and against the frame.

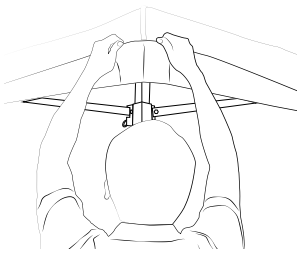


2 Make sure that the Food Booth Walls are unzipped at each corner of the shelter and the ties with toggles are toward the top. Begin on the side of the E-Z UP® where the zippered entrance will be, tie one end of the wall to the upper truss frame toward the middle of the truss wall centering the middle zipper as an entrance.

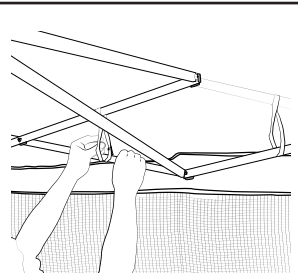

3 From the inside, go to the next tie closest to the entrance. Tie screen to top outside truss near corners of the frame and repeat until all four sides of the E-Z UP® are covered. Additional elastic bands with V-hooks are also located around each of the frame legs for a snug fit.

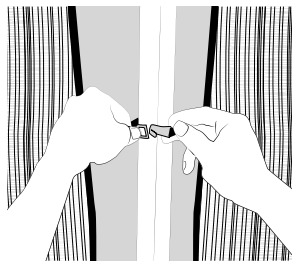


Zip corner walls to fully enclose your E-Z UP® Instant Shelter® including the entrance and exit. From the outside of the Food Booth Wall, pull top back down over the wall at corners.

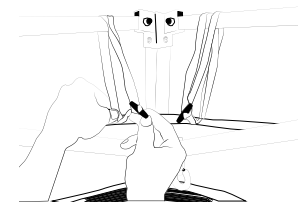

Corner

FOOD BOOTH WALL TAKE DOWN:

1 From the outside of shelter fold top fabric back from each corner. Completely unzip the Food Booth Wall entrance.

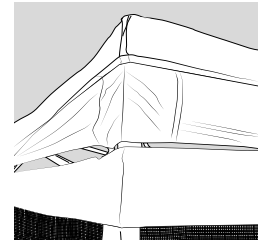


2 Untie toggles and unlatch V-hooks on one of the zippered ends. Gather the wall from bottom to top. Continue untying and unlatching until all Food Booth Walls are gathered.




ROLL UP WINDOW SET UP

Unzip & roll up window flap using the toggles to latch window in place.

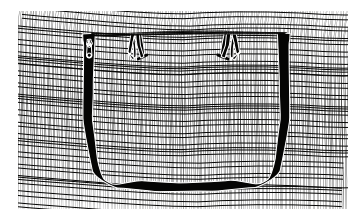

Window Down

Unzip & roll up window flap using the toggles to latch window in place.

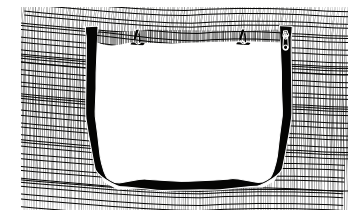

Window Up

IMPORTANT INFORMATION

1. Always stake or weight down your E-Z UP® INSTANT SHELTER®. Take down if heavy winds threaten to blow.
2. Use a mild soap (not detergent) and water for cleaning.
3. Let the E-Z UP® INSTANT SHELTER® top, frame and screen room dry completely before closing or storing.
4. The E-Z UP® INSTANT SHELTER® is designed as a temporary shelter. We do not recommend leaving it up for extended periods of time. Do not leave the E-Z UP® unattended.
5. Handle Food Booth Walls with care. **Do not store stakes of shelter with Food Booth Walls.**

INTERNATIONAL E-Z UP, INC.
 1900 Second Street, Norco, California 92860
 (951) 279-0999 • Fax (951) 279-0888 ezup.com

800-45 SHADE
800-457-4233

WARNING: Handle the screen material carefully to avoid rips or tears. Keep fire or lighted objects away.